

Assembly Instructions

1



To Install the Foundation Cover:
1. Layout the old foundation on the floor in an open area.

2. Lay new foundation cover over the old foundation.

3. Pull new foundation cover over all sides of the foundation cover.
Note: The foundation cover is a snug fit.

2



4. Peel and Stick the supplied Velcro to the bottom of the old foundation.

3



5



After Foundation Cover has been installed.

5. Place Covered Foundation on top of Metal Bed Frame.

6



6. Remove Top Cover from packaging and place on top of foundation with the holes facing up. Also make sure the holes are on the head side of the bed. Note: The head and foot rails are pre installed at the factory.

7. Remove Side Rails from packaging and lay them on top cover with holes at the head side of the mattress. Also make sure that the holes as well as the 1 inch flat area on the side rails are on the top.

7 & 8



8. Unzip the long zipper on the top cover.

9. With the concave side of the side rail facing in towards the center of the mattress insert one end of the rail into the zippered pocket in the top cover. Insert the other end of the side rail by slightly kinking the rail and inserting it into the pocketed area.

9



10. After both side rails are inserted and centered from head to foot, close the zippered pocket in the top cover.

11



11. Turn over the top cover and align it with the foundation. Make sure the holes in the top cover are at the head side of the mattress.

12 Adjust all rails by pushing them towards the outside of the mattress.

13. Lay the supplied 1” thick gray base foam inside the mattress and push it down making sure the foam is resting on the 1” flat area of the concave cavity.

12



13



14



14. Remove blue air chambers from packaging and lay on top of the gray base foam. Make sure the red elbows are at the head of the mattress.

15. Feed hoses through the holes in the bottom of the top cover and through the cavity. Connect to the quick connectors at the end of the hose assembly to the air chamber.

15



16. After both hoses are connected to the air chambers, connect the opposite ends of the hoses to the front quick disconnects on the front of the pump.

17. Fill air chambers until the digital read out on the hand control indicates a pressure level of 20.

15



17



18



18. After air chambers are partially filled adjust the air chambers so they are centered properly within the foam frame. Next remove the yellow convoluted foam pad and lay on top of foam rails and air chambers.

19



19. Lay 1" thick Visco foam layer on top of the yellow convoluted foam pad.

21 & 22



20. Remove pillow top from packaging and choose either the Summer or Winter side up by laying the pillow top on top of mattress. Make sure the start and stop point of the zipper is on the proper side of the mattress.

21. Zip on the top cover by inserting the male side of the zipper into the slider. This is located on the side of the mattress centered between the head and foot.

22. Position the pump under the metal bed frame. The pump should be located in the center of the bed up towards the head of the mattress.

23. Insert hand control pockets between the top portion of the mattress and the foundation. These should be inserted towards the head of the mattress.



22



23



24. This mattress is equipped with a patented reversible pillow top. The pillow top has a summer side as well a winter side. To switch the pillow top from summer to winter or from winter or summer. First completely unzip the pillow top. Next flip the pillow top over in a head to foot operation. Zip on the pillow top by inserting the male side of the zipper into the slider. This is located on the side of the mattress centered between the head and foot.